## **File Formats**

#### .ICF radio files

The .ICF files for the relevant radios can be **Open**ed in the programming software or copied to an SD card for directly loading into the radio. These files contain all the required information to program the radio except your call sign.

### .CSV Files

The CSV files can be edited in a spreadsheet program if you require a custom list or directly imported into the programming software by using "Import" into the "Memory Channels" and/or "Repeater List" sections.

The .ICF files are updated regularly from the data supplied by www.ukrepeaters.net

The ICF files for the ID 51(plus), 5100 and 7100 contain all UK Analogue, D-Star Repeaters and Nodes plus a selection of D-Star repeaters from around the world.

The ID-7100 CSV file also contains the licensed 10, 6 and 4 Metre repeaters and nodes.


Download the files you require to your PC from Icom UK's d-staruk.co.uk website.

# Remember... You can not open a .CSV file in the programming software you must Import it into the required section.

The example below can be used for the ID-5100 and ID-51 (and Plus). For ID-7100 see the last page.

### **Useful Links:**

Icom UK YouTube channel, D-Star Procedures and Programming: <u>https://www.youtube.com/playlist?list=PLGgz6wUvksVtnSTiVi3zPHc70cx2p0MrN</u>

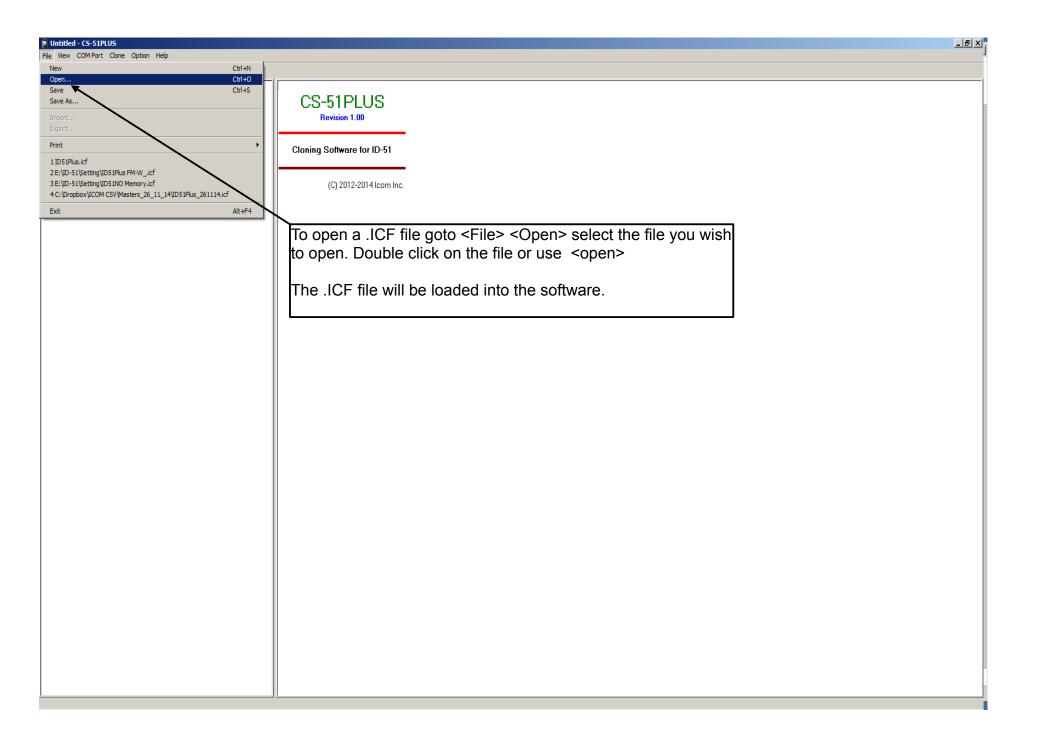

#### D51Plus.icf - CS-51PLUS

<u>File View COM Port Clone Option Help</u>

⊒ <b>[]</b> ID-51	<u> </u>	A: UHF_RP1	F - A to K	(Rema	in 230 CH)		
🖻 🧰 Memory CH			Frequency	,			
0 - 99 		CH CH Select	Operating Freq	DUP	Offset Freq	TS Mode	Name
		0 1 2	430.980000	+DUP,	7.600000	25k, FM-N	GB3AC-LYDNEY GLO
400 - 499 - 📓 Program Scan Edge		2 3	433.270000	+DUP	1.600000,	25k, FM-N	GB3AH-EAST DEREH
Scan Name		3 4	433.200000	+DUP	$1.600000_{+}$	25k, FM-N	GB3AN-AMLWCH
🖃 🛅 Bank CH		4 5	433.180000	+DUP	$1.600000_{+}$	25k, FM-N	GB3AU-AMERSHAM
Bank Name		56	433.050000	+DUP	$1.600000_{+}$	25k, FM-N	GB3AV-AYLESBURY
		6 7	433.250000	+DUP	$1.600000_{+}$	25k, FM-N	GB3AW-NEWBURY
🛛 📕 B: UHF_RPT - L to Z 🥆		7 8	430.860000	+DUP	7.600000	25k, FM-N	GB3BE-DUNS
C: VHF_RPT - A to K		89	433.180000	+DUP	1.600000,	25k, FM-N	, GB3BL-BEDFORD
D: VHF_RPT - K to Z		9 10	433.000000		1.600000,	25k, FM-N	, GB3BN-BRACKNELL
E: E:		10 11	433 150000	+DUP,	1.600000	25k, FM-N	GB3BR-BRIGHTON
	Import .CSV files for			JP,	7.600000	25k, FM-N	GB3BS-BRISTOL CI
H:	nodes into "Bank CH	l" You can cre	ate a name	) JP	$1.600000_{+}$	25k, FM-N	GB3BV-HEMEL HEMP
	for the bank in "Bank	< Name"		JP,	$7.600000_{+}$	25k, FM-N	GB3BZ-BRAINTREE
<b>i</b>				UP,	$1.600000_{+}$	25k, FM-N	GB3CA-CARLISLE
🔛 K:	Goto <file><import></import></file>	select the file	e you want	JP,	$1.600000_{+}$	25k, FM-N	GB3CB-BIRMINGHAM
<b>@</b> L:	and it will be importe	ed into the sele	ected "Bank	ι JP,	$7.600000_{+}$	25k, FM-N	GB3CC-CHICHESTER
	Name"			JP,	$1.600000_{+}$	25k, FM-N	GB3CE-COLCHESTER
N: 0:				JP,	$1.600000_{+}$	25k, FM-N	GB3CH-LISKEARD
	In this example UHF	RPT - A to K		UP,	$1.600000_{+}$	25k, FM-N	GB3CI-CORBY
Q:	•	—		UP,	$1.600000_{+}$	25k, FM-N	GB3CK-CHARING KE
- E		21 22	433.230000	+DUP	$1.600000_{+}$	25k, FM-N	GB3CL-CLACTON
🗐 S:		22 23	433.200000	+DUP	$1.600000_{+}$	25k, FM-N	GB3CM-CARMARTHEN
<b>I</b> T:		23 24	433.150000	+DUP	$1.600000_{+}$	25k, FM-N	GB3CR-CAERGWRIE
<b>@</b> U:		24 25	433.230000	+DUP	$1.600000_{+}$	25k, FM-N	GB3CV-COVENTRY
- <u> </u>		<b>25</b> 26	433.100000	+DUP	1.600000	25k, FM-N	GB3CW-NEWTOWN PO
		<b>26</b> 27	433.250000	+DUP	1.600000	25k, FM-N	GB3DD-DUNDEE
X: Y:		27 28	433.180000	+DUP	1.600000	25k, FM-N	GB3DE-IPSWICH
Z:		28 29	433.150000		1.600000	25k, FM-N	GB3DI-DIDCOT
		29 30	430.930000	+DUP.	7.600000	25k FM-N	. GB3DM-DUMBARTON
🖬 Brogram Coop Link	<u> </u>						<u> </u>

### 

ID51Plus.icf - C5-51PLUS						
File View COM Port Clone Option Help						
🖃 👸 ID-51	<b>_</b>	)1: UK	_DStar_UHF	Rpt (Remain 7	3 memories)	
🖻 🧰 Memory CH					· · · · · ·	Cell Cir
						Call Sig
⊡- Bank CH CALL CH		No.	Туре	Name	Sub	Name Rep Call
⊡ Ingram Scan Link		0	DV Deve eter		DOt- D	
E BC Radio Memory		0	DV Repeater		DStarRj	
		<u> </u>	DV Repeater		DStarRj	
E Digital		2	DV Repeater		DStarRi	
Your Call Sign		3		ASHINGTON	DStarRj	
🖻 🤖 Repeater List		4	DV Repeater		DStarRi	
Group Name		5	DV Repeater		DStarRi	
01: UK_DStar_UHF_Rpt		6	DV Repeater		, DStarRi	
02: UK_DStar_VHF_Rpt		7		BIRKENHEAD	, DStarRi	
		8		BIRMINGHAM	, DStarRi	
04: UK_FM_VHF_Rpt 05: Australia		9	DV Repeater		, DStarRi	
- B 06: Canada		10	DV Repeater		, DStarR	p <sub>I</sub> GB7AD E
07: Europe Eastern		11	DV/Dopostor		DStarR	p <sub>I</sub> GB7CD E
08: Europe Northern	•		D-Star repea	aters and nodes	, DStarRi	p , GB7ZP B
09: Europe Southern	into "Repeater	List"			, DStarRi	p , GB7DC E
- 📓 10: Europe Western					, DStarRi	p <sub>,</sub> GB7MH B
📓 11: Germany	Goto <file><in< td=""><td>nport&gt;</td><td>&gt; <group> se</group></td><td>elect the file you</td><td>, DStarRi</td><td>p <sub>I</sub>GB7EP B</td></in<></file>	nport>	> <group> se</group>	elect the file you	, DStarRi	p <sub>I</sub> GB7EP B
📓 12: Italy	want and it will	want and it will be imported into the selected				p <sub>L</sub> GB7FH B
- 📃 13: Japan	"Bank Name"				DStarR	p GB7FK B
14: Latin America	In this example	e UK	DStar UHF	Rpt	DStarR	p GB7CF B
		_			, DStarRi	p GB7IC B
- I i i i i i i i i i i i i i i i i i i	All CSV file nar	mes e	endina in "AL	L" on the .CSV	, DStarRi	p , GB7SS B
17: Simplex	download secti				, DStarRi	
19: USA Northeast	import into the				DStarR	
20: USA Southeast					, DStarRi	
- 📓 21: USA West					, DStarRi	
					, DStarR	
- 📓 23: UK_FM_Gates		26	DV Repeater	MILTON KEYNES	, DStarRi	
		27		MITCHELDEAN	, DStarRi	
		28		NEW MARSKE	, DStarRi	
		29		NORTHAMPTON	, DStarRi	
		30	DV Repeater		, DStarRi	
		31	DV Repeater		DStarRi	
30:		32	DV Repeater		, DStarRi	
n must attion must be		<u> </u>			, Dolarni	
						<u> </u>

#### ID7100.icf - CS-7100

File View COM Port Clone Option Help

🛤 IC-7100 🖻 🎦 Memory CH	Memory Cl	1						
A01 - A99					Frequency			
B01 - B99 C01 - C99 D01 - D99	СН	Name	SEL	Split	Operating Freq	DUP		
E01-E99	A01 GB	3AC-LYDNEY GLO			430.980000	+DUP		
Program Scan Edge	A02 GB	3AH-EAST DEREH			433.270000	+DUP		
CALL CH	A03 GB	3AN-AMLWCH			433.200000	+DUP.		
🕀 🤖 DR Mode	Import .CSV files for analog				433.180000	+DUP.		
⊟ <mark>Ene</mark> Digital	nodes into "Memory CH"				433.050000			
	Goto <file><import> sele</import></file>				433.250000			
Group Name	and it will be imported into	the selected			430.860000			
01: UK_DStar_UHF_Rpt	memory channels				433.180000			
					433.000000,			
					433.150000,			
	A11 GB	3BS-BRISTOL CI			430.850000,			
07: Europe Southern		3BV-HEMEL HEMP			433.020000,			
08: Europe Western		3BZ-BRAINTREE			430.850000			
		Import .CSV files for D-Star repeaters and nodes into "Repeater List" 33.320000,+DUP, 33.350000,+DUP, 30.960000,+DUP,						
- 🛄 11: Japan	•							
12: Latin America								
13: Netherlands 14: Oceania								
15: UK_DV_Nodes	imported into the selec				33.050000			
16: USA Midwest	In this example UK_DS	star_UHF_Rpt			33.050000			
	All CSV file names and	All CSV file names ending in "ALL" on the .CSV download section						
		n website are for import into the "Repeater			33.000000 33.230000			
20: Simplex					33.200000			
21:		3CR-CAERGWRIE						
	AZ3 GB				433.150000	+000		